

Collegamento per il programmatore

Parallel Port	Programmer Function
Pin 6	AVR SCK (clock input)
Pin 7	AVR MOSI (instruction in)
Pin 9	AVR RESET (micro reset)
Pin 10	AVR MISO (instruction out)
Pin 25	Signal Ground

